


*Ed Sementini's*  
**Town & Country**  
Door and Operator Co.  
phone 203.563.9300  
www.townandcountrydoor.com

## Jack Shaft Operator Wiring Instructions

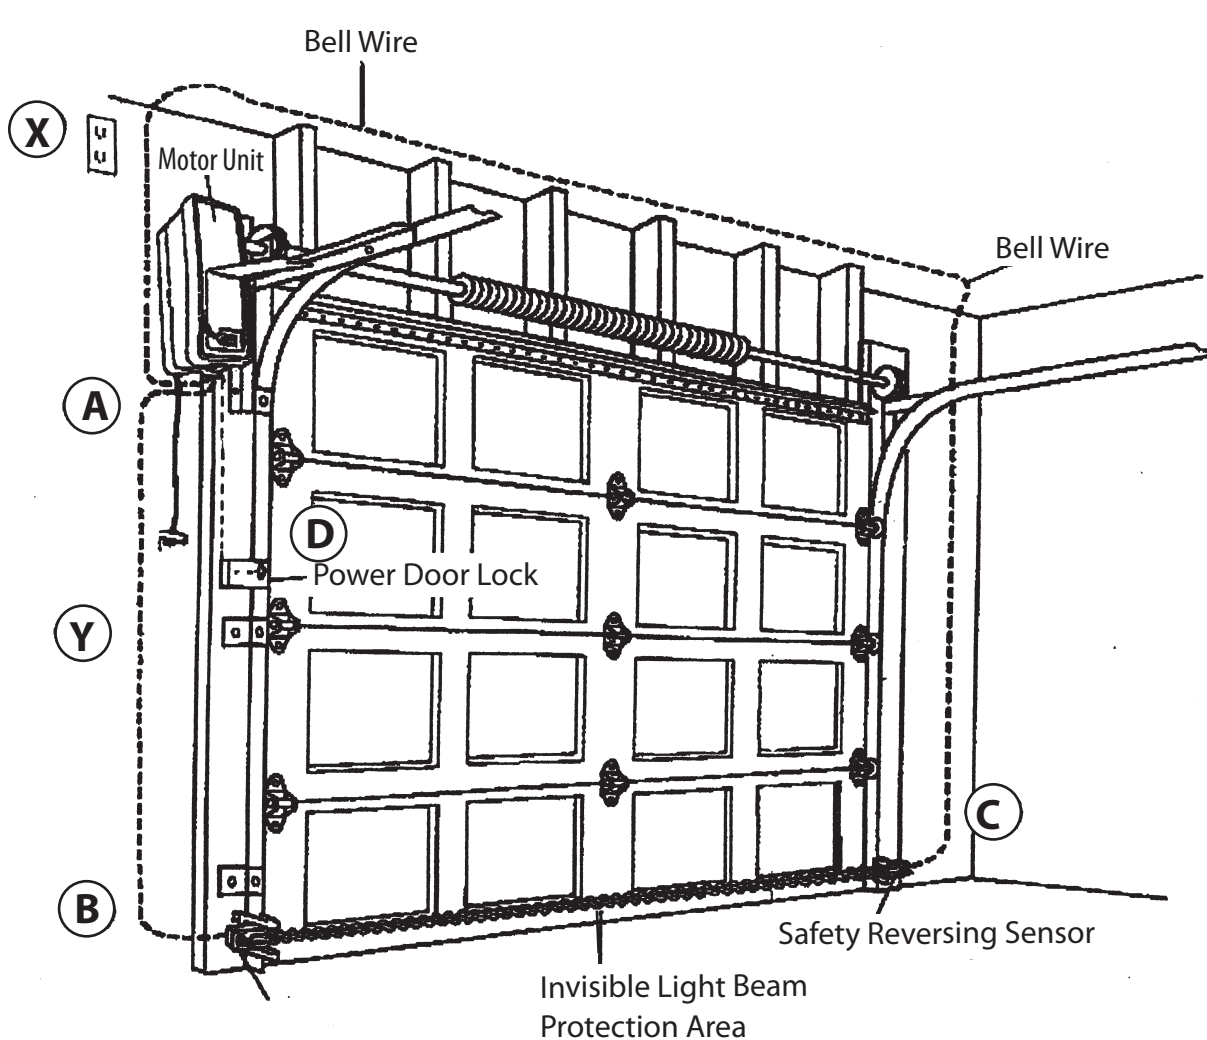

- X** 110 Volt duplex outlet for power cord can be located above or below operator.
- Y** 2-Conductor Wire (22 Gauge) from location **A** near operator to location **B** & **C** at sides of door. **D** Power door lock wire.
- Z** Location of 110 Volt duplex outlet for auxiliary light fixture, wireless remote controlled, should be located on center 10'0" to 12'0" back of the door.

\*Operator can be located on either side of garage door within 13" of the opening.