



2x6 pads to go from the floor to 18" above the finished opening height. If there is less than 18" they need to extend from the floor to the ceiling.

Tracks need to mount to ceiling joists. If there is going to be a steel, concrete, or dropped ceiling, blocking has to be provided in the correct locations. Please notify us of these special conditions so we can provide measurement for the correct placement of blocking.

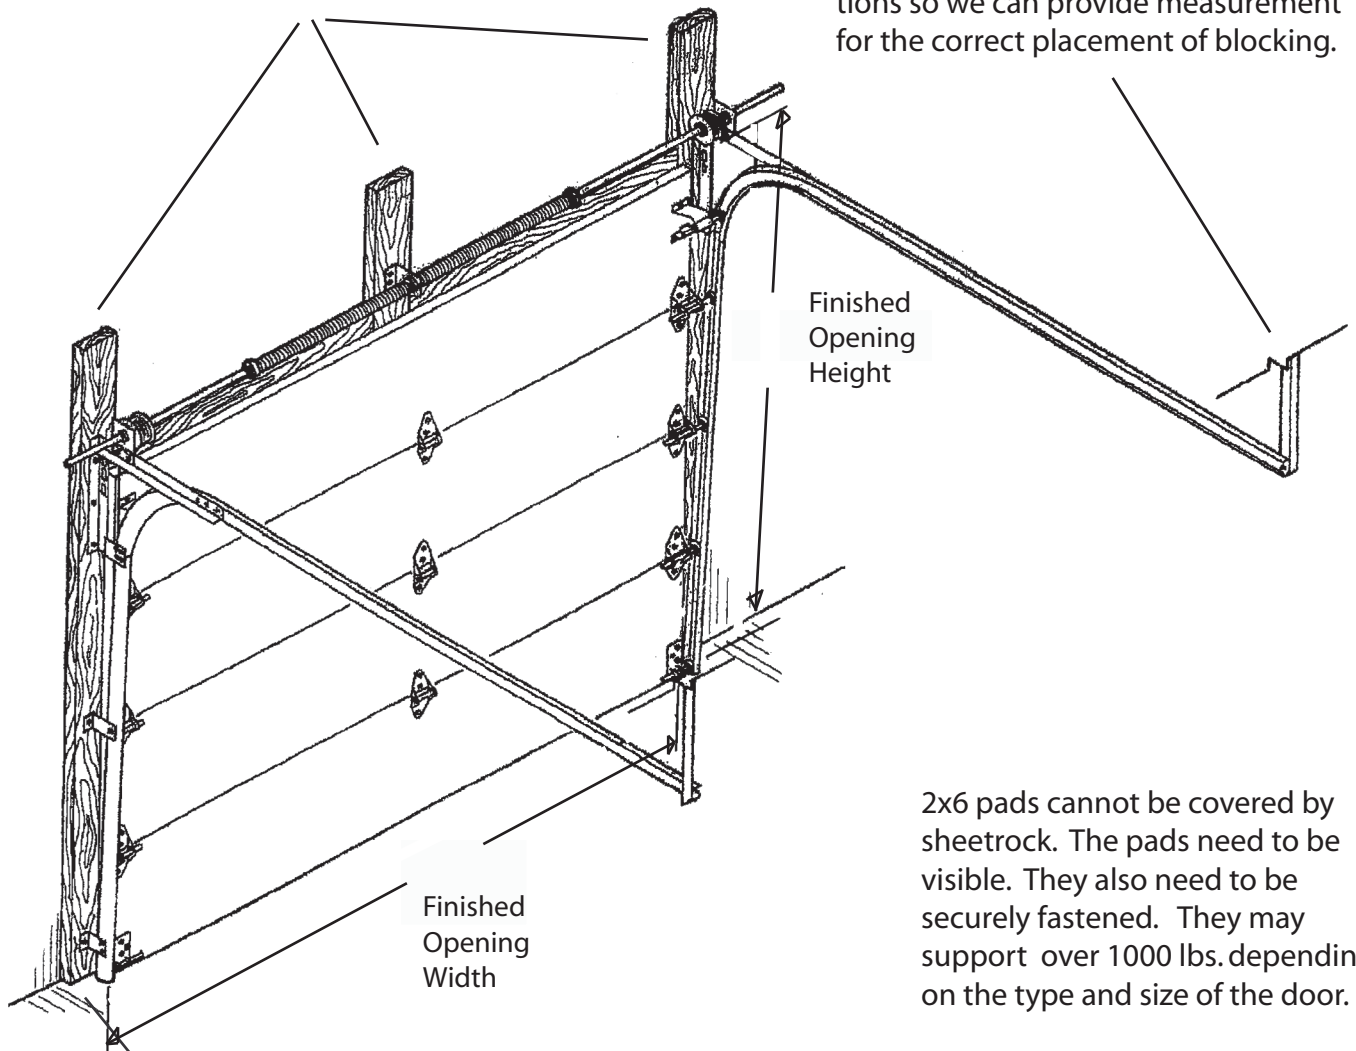

2x6 needs to go all the way to the floor. It cannot stop at the concrete. The track is mounted on continuous angle iron and goes to the floor.

2x6 pads cannot be covered by sheetrock. The pads need to be visible. They also need to be securely fastened. They may support over 1000 lbs. depending on the type and size of the door.

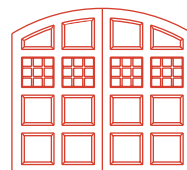

*Ed Sementini's*  
**Town & Country**  
Door and Operator Co.  
phone 203.563.9300  
www.townandcountrydoor.com